




Balcony Installation Guide

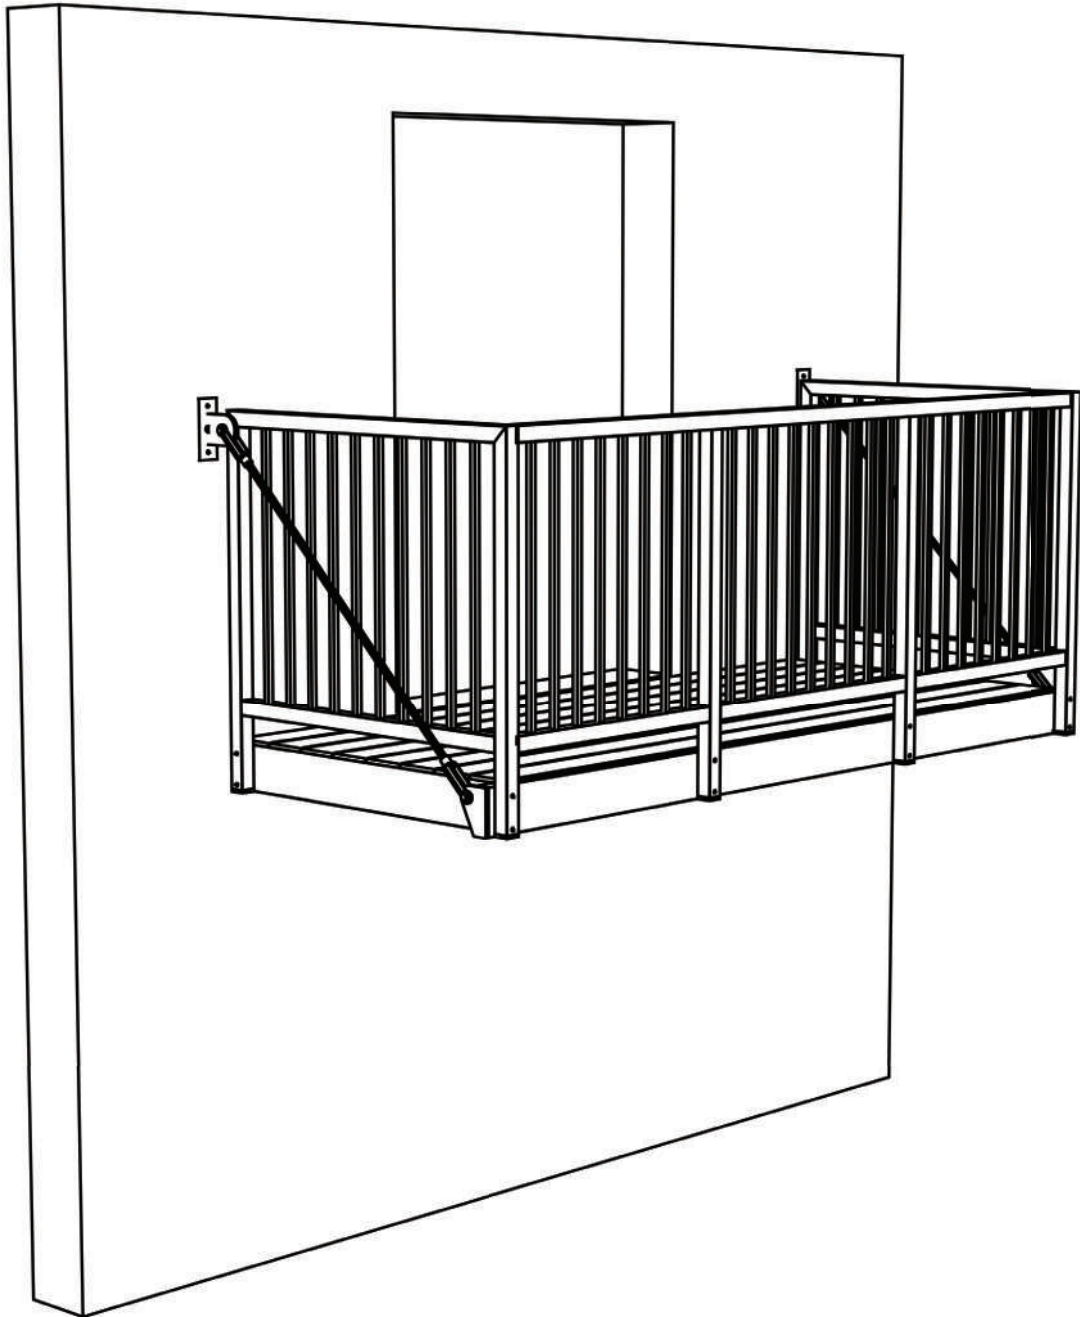

Parts List

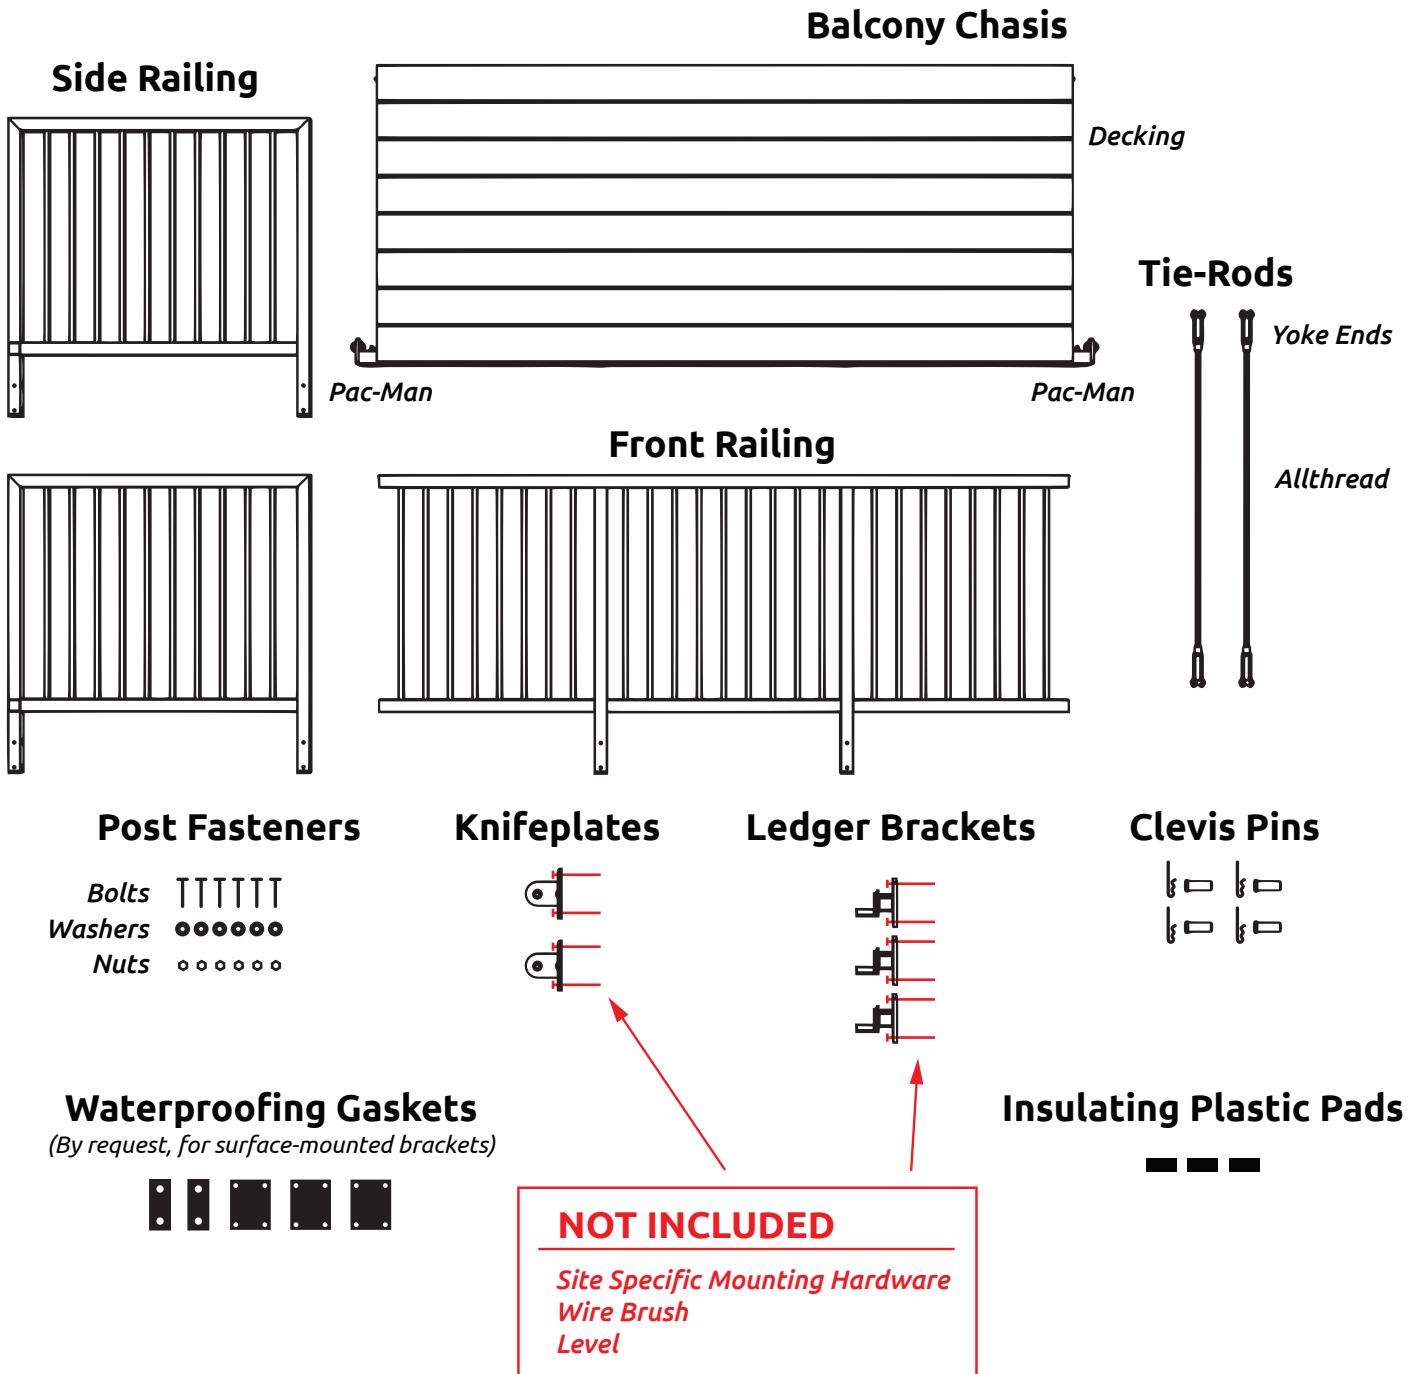


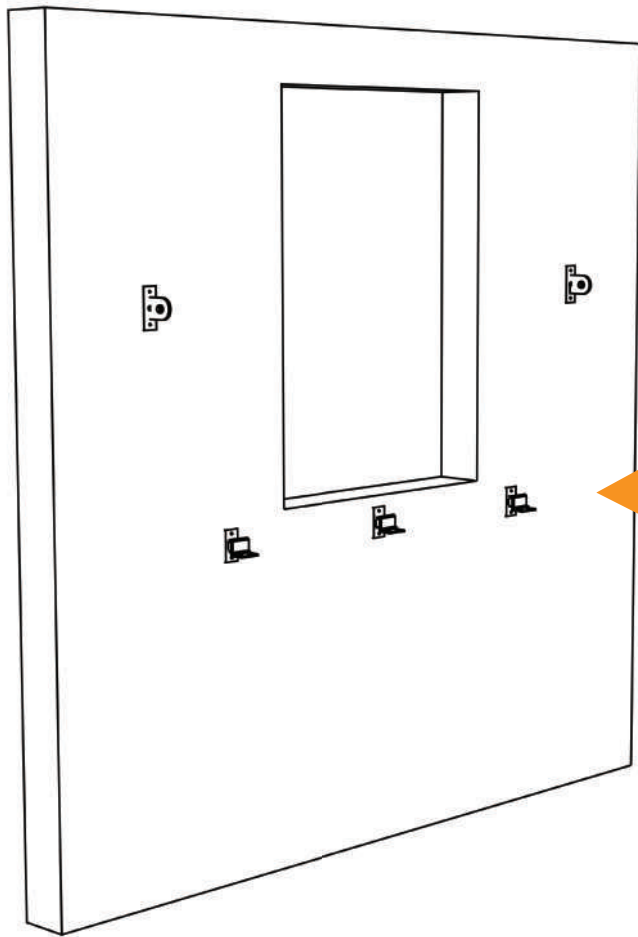


- ⊕ **For surface-mounted brackets:**
Attach the optional adhesive backed waterproofing gaskets to the base of each knifeplate and ledger bracket


- ① **Level and install all knifeplates & ledger brackets per Vestis shop-drawing measurements**

- ② **Use the provided fasteners to connect each post to the predrilled chassis fascia holes**

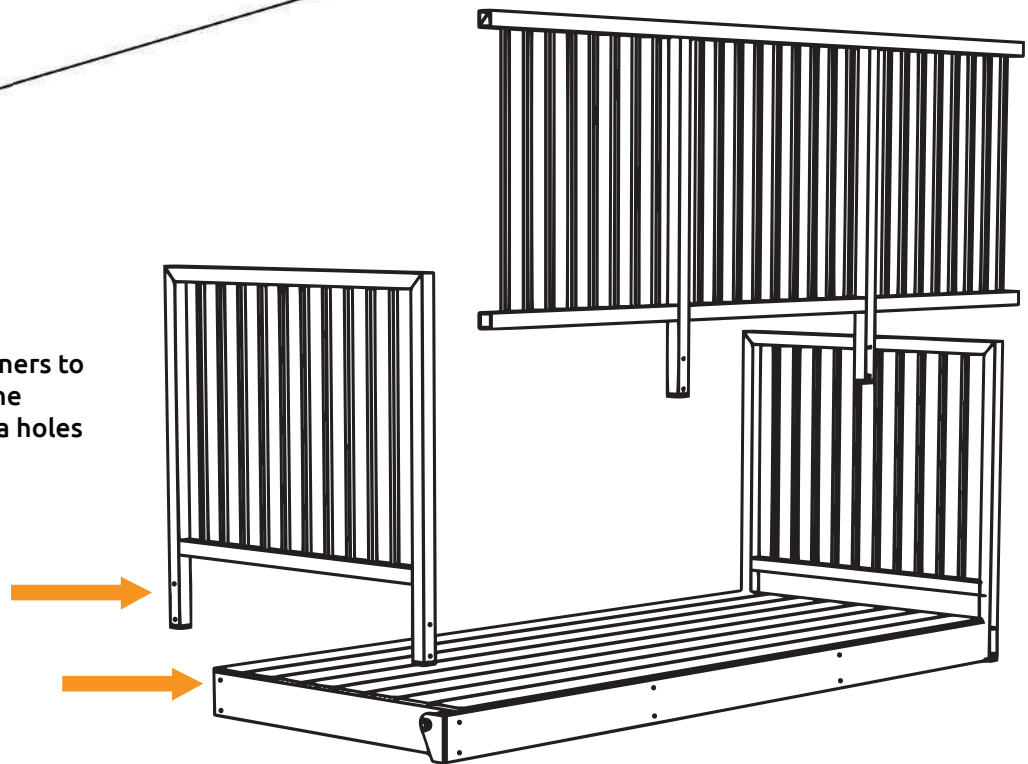

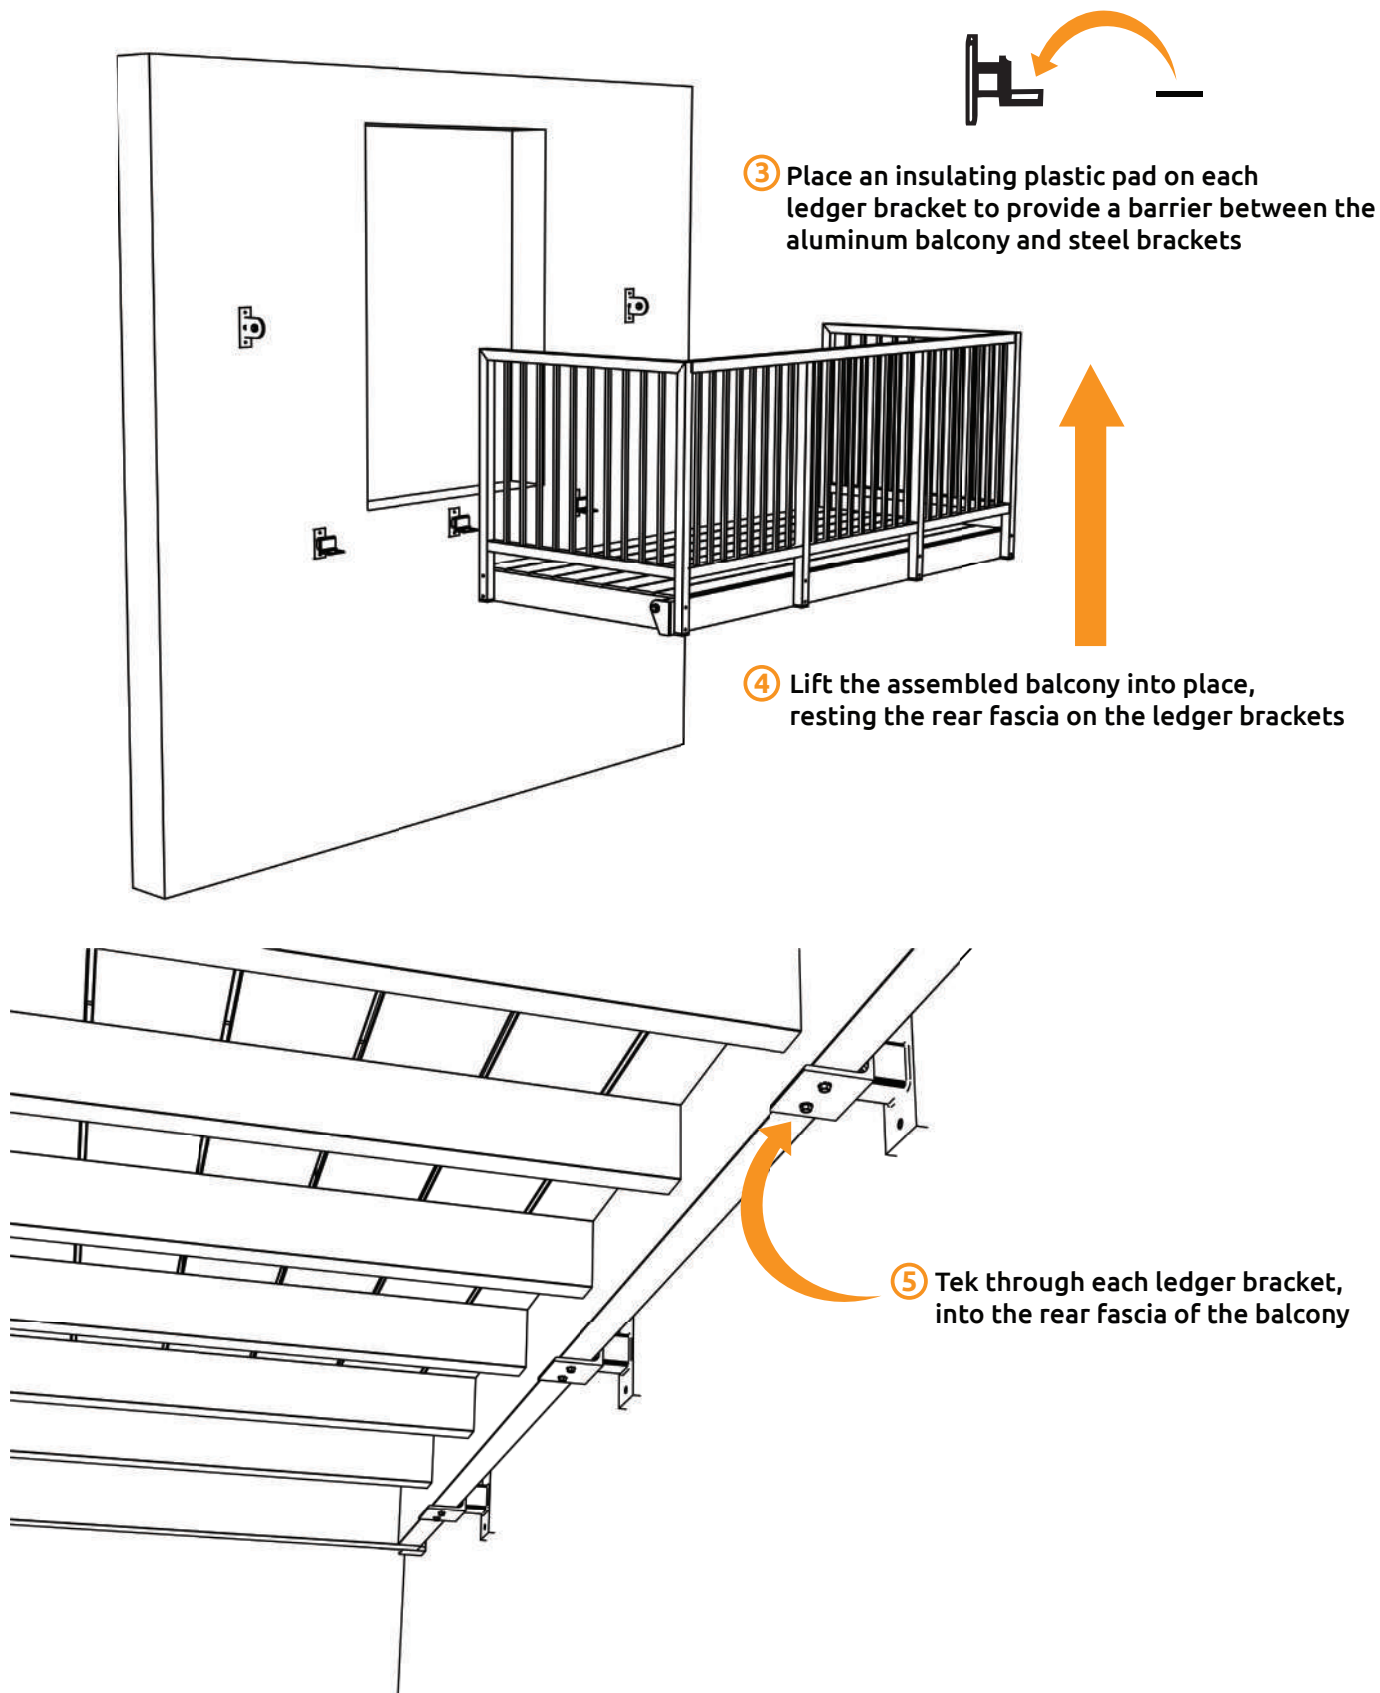

⑥ Level the balcony from front to back

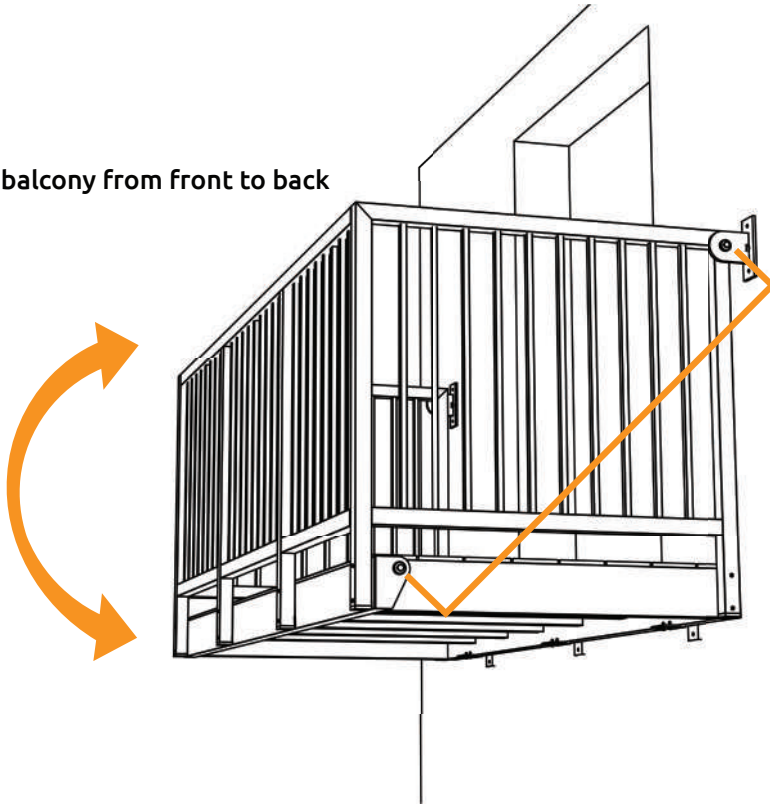


⑦ Measure the distance from pac-man to knifeplate

⑧ Measure the distance between the holes of each yoke end to match the distance from pac-man to knifeplate



⑨ *Optional: Mark a cutline on the allthread
(Tierods are delivered long to accomodate a variety of feild conditions.
They may be trimmed to length for ease of installation)*

⑩ *Optional: Cut the allthread to length, leaving a margin for adjustment*





⑪ *Optional: Use a wire brush to clean the end of the allthread*



⑫ Screw on the yoke end

- ⑬ Align each tie-rod with the pac-man and knifeplate, then secure with clevis pins

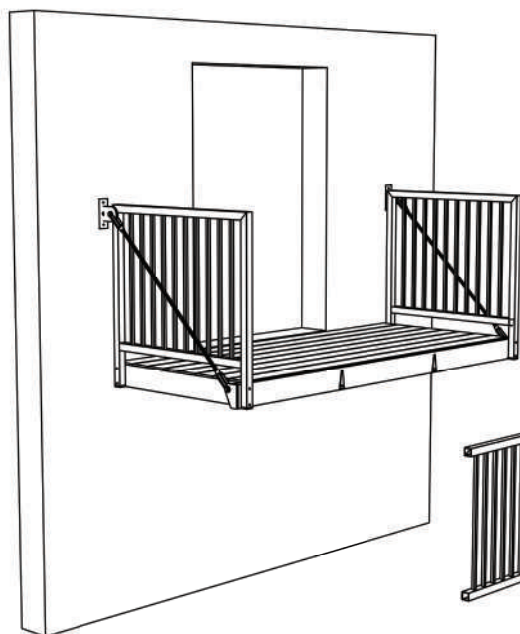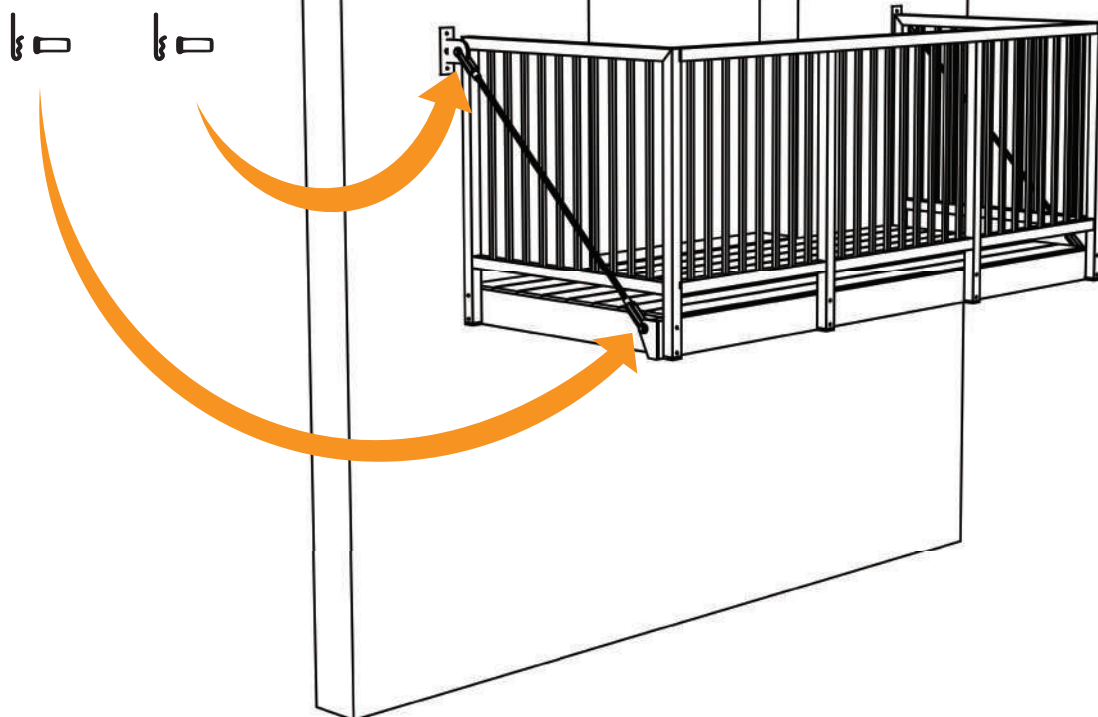

- ⊕ Attach the front railing with included hardware